
7 APPENDIX


7.1 MAINTENANCE

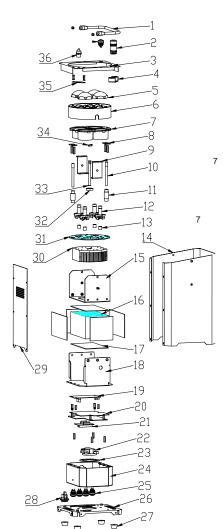

No.	Item Name		
1	Hanger		
2	Wireless Receiver		
3	Top cover		
4	Fix board of wireless Receiver.		
5	Lens.		
6	Plastic cover 1 for fixing lens.		
7	Plastic cover 2 for fixing lens.		
8	Fixed board for zoom		
9	Connecting bracket for zoom.		
10	Zooming supporter		
11	Zooming pillar		
12	Light Guid Bart		
13	light barrier.		
14	Body cover A		
15	Arm		
16	Lithium battery		
17	Foam pad.		
18	Lithium battery holder.		
19	Wireless receiver board.		
20	Driver board		
21	Display board.		
22	Recharge socket A.		
23	Bearer for recharge socket A		
24	PCB holder.		
25	Button of display board		
26	Full-featured control panel.		
27	Foot.		
28	Power switch.		
29	Body cover B.		
30	Cooling aluminum.		
31	Led board.		
32	Zooming nut.		
33	Zooming screw.		
34	Connector for lens		
35	Fixed board for LED charge indicator		
36	LED charge indicato.		

USER MANUAL

4X10W RGBW 4 IN 1 Led Wireless Battery Zoom Light

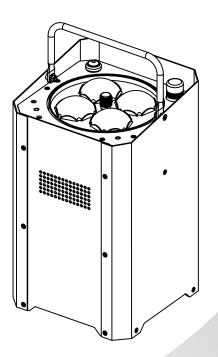

CE




Please Read Over This Manual Before Operating The Light Fixture

ABLE OF CONTENTS

PART 1	PRODUCT SPECIFICATIONS1.
	1.1TECHNICAL SPECIFICATIONS1.
	1.2DIMENSIONS
	1.3SAFETY WARNING
PART 2	INSTALLATION
	2.1OPERATING POSITION
	2.2CHARGING INPUT
	2.3FUNCTION OPERATION
	2.4OTHER OPERATIONS
D4.DT.0	
PARI 3	USING THE MENU
	3.2MENU 5.
	3.3EDIT STATIC COLOUR
	3.4ACTIVATING AUTO PROGRAMS
	3.5DMX512 SETTINGS
	3.6RUN MODE
	3.7PERSONALITY
	3.8SPECIAL SETTINGS7.
	3.9EDITING CUSTOM PROGRAMS7.
	3.10WHITES CALIBRATION8.
	3.11RGB CALIBRATION
	3.12WDMX SETTINGS8
	HONG BUYER CONTROLLED
PARI 4	USING DMX512 CONTROLLER9.
	4.1BASIC ADDRESSING
	4.2CHANNEL ASSIGNMENT
PART 5	EASYPLAY REMOMTE CONTROL15.
	5.1KEY FUNCTIONS
	5.2STATIC CONTROLS
	5.3EFFECT CONTROLS
	5.4COLOR CONTROLS
DART 6	BATTERY CHARGING16.
. 411.10	DATTERT VITAROINO10.
PART 7	APPENDIX17.
	7.1MAINTENANCE

6.3 CHARGER SPECIFICATIONS


Voltage: AC100-240V, 50/60Hz Output: DC24V, 3A

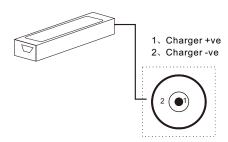

6.4 FLIGHTCASE SPECIFICATIONS

Voltage: AC100-240V, 50,60Hz Rated Power: 300W Weight: 21KG

Dimensions: 730 x 400 x 520mm

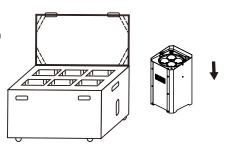

6.5 IMPORTANT FACTS:

HOW TO CARE FOR YOUR BATTERY!

CHARGING

●DO NOT CHARGE FOR MORE THAN 24HRS

- ●RECHARGE WITHIN 3 DAYS OF USE
- ●CHARGE WITH FLIGHTCASE OPEN

STORING

- •STORE WITH FULL LOAD
- TURN OFF AT BASE WHEN STORING FOR MORE THAN 7 DAYS
- STORE IN AN UPRIGHT POSITION

6 BATTERY CHARGING

6.1 BATTERY SPECIFICATIONS:

Type of bettery:Lithium Battery

Voltage: 24V


Storage Capacity: 8800mA

Charge Time: 8 hrs

Discharge Time: 8hrs (in fixture at full output)

Weight: 1.2Kg

Dimensions:135X65X76mm

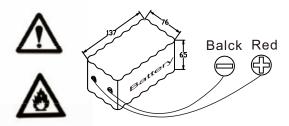

6.2 SPECIAL CONSIDERATIONS:

Charging

- •Do not charge for more than 24 hours
- •Always charge with flightcase open
- •Always recharge within 3 days of use
- •Always charge with supplied charger

Operation

- ●Recommended ambient temperature is between 0°C to 35°C
- •Always use fixture in a vertical or near-vertical position (<30deg. from vertical)
- •Do not operate in a sealed enclosure with insufficient air flow

Storage

- ●Always store at a temperature below 35°C (below 25°C is best)
- •Always store in a vertical position
- Always store fully charged
- •It is important to carry out one full discharge and charge cycle every 3 months
- •Always use the battery switch when storing for longer than 7 days
- •Store in a dry environment away from direct sunlight

Maintenance


- •Always switch off the battery switch when carrying out maintenance
- •Do not allow battery contacts come into contact with fixture housing
- •Do not link the positive and negative terminals in any way

1 PRODUCT SPECIFICATIONS

1.1 TECHNICAL SPECIFICATIONS

LED MODULE	
LED MODULE:	4pcsx10W (RGBW 4 in 1 LED)
Voltage	24VDC
Zoom Range	7~60°
Power	40W
Type of bettery	Lithium Battery
IP Rating	IP 44
Operation Temperature	0℃~35℃(operating)
	0℃~35℃(startup)
Dimensions	270x160x160mm
Weight	4.5Kg

1.2 DIMENSIONS

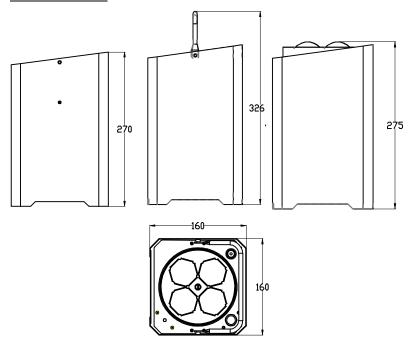

1.3 SAFETY WARNING

IMPORTANT

[ALWAYS READ THE USER MANUAL BEFORE OPERATION.]
[PLEASE CONFIRM THAT THE POWER SUPPLY STATED ON THE PRODUCT IS THE SAME AS THE MAINS POWER SUPPLY IN YOUR AREA.]

- This product must be installed by a qualified professional.
- Always operate the equipment as described in the user manual.
- A minimum distance of 0.5m must be maintained between the equipment and combustible surface.
- The product must always be placed in a well ventilated area.
- Always make sure that the equipment is installed securely.
- Do not stand close to the equipment and stare directly into the LED light source.
- Always disconnect the power supply before attempting maintenance.
- Always make sure that the supporting structure is solid and can support the combined weight of the products.
- The earth wire must always be connected to the ground.
- Do not touch the power cables if your hands are wet.


ATTENTION

- Do not operate in a sealed enclosure with insufficient air flow
- Do not operate in an environment with temperatures in excess of 45deg. C.
- Do not operate store in close proximity to source of fire.
- Always charge with supplied charger
- Do not charge for more than 24 hours
- Always turn off battery storage switch when storing for longer than 7 days
- Always store with full load
- Always charge with flightcase open
- Always carry out one full discharge and charge cycle every 3 months
- Always store in a dry environment away from direct sunlight


2 GETTING STARTED

2.1 OPERATING POSITION

 This lighting fixture is powered using a Lithium Battery which requires that the correct product orientation is always maintained for operation.

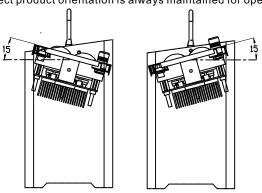

5 EASYPLAY REMOTE CONTROL 5.1 KEY FUNCTIONS

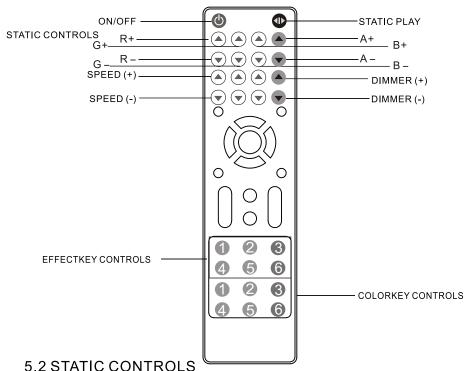

5.2 6 17 (110 GG) (11 (GE)

- Select the [STATIC PLAY] key to enter the [STATIC] play mode.
- Adjust [STATIC] play using [RED], [GREEN], [BLUE] and [STROBE].
- Adjust light level using the [DIMMER] keys.

5.3 EFFECT CONTROLS

- Select from [EFFECTKEY 01] to [EFFECTKEY 06] to play required play function (see section 2.3.3 for further information on how to patch [EFFECTKEY])
- Select [SPEED (+)] or [SPEED (-)] to adjust speed play function.
- It is not possible to adjust the light level of the EFFECT programs using the [DIMMER] keys.

5.4 COLOR CONTROLS

- Select from [COLORKEY 01] to [COLORKEY 06] to play required pre-set color (see section 2.3.3 for further information on how to create/edit [COLORKEY])
- Adjust light level using the [DIMMER] keys.
- Edit colors by press & holding a [COLORKEY] until lighting fixtures flash, then adjust using [RED], [GREEN], [BLUE], [STROBE] and [DIMMER] keys. (exit by selecting any other key)


AR2.S

CHANNEL	VALUE	FUNCTION
1	0<⇒ 255	DIMMER
2	0⇔ 255	RED
3	0⇔ 255	GREEN
4	0⇔ 255	BLUE
5	0⇔ 255	WHITE
6	0⇔ 255	STROBE

HSV


(CHANNEL	VALUE	FUNCTION
	1	0⇔ 255	HUE
	2	0<⇒ 255	SATURATION
	3	0⇔ 255	VALUE

5 OPERATION WITH WIRELESS DMX

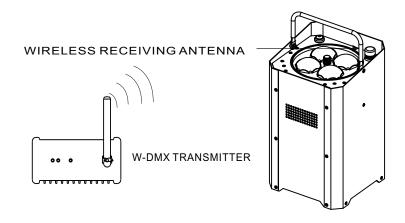


- 5.1 When using this lighting fixture with W-DMX receiver installed inside, the fixture may be placed at a range of 300m from W-DMX transmitter
- 5.2 Select DMX from the <RUN> menu.
- 5.3 Select ACTI from the <WDMX> menu and proceed to turn ON the WDMX. If the WDMX receiver card is already paired with a WDMX transmitter then the fixture is ready for receiving DMX signal. If the WDMX receiver card needs to be paired with a new WDMX transmitter, select YES from the <WDMX >/<REST> menu. The green signal indicator LED will not show which confirms that WDMX receiver card is unpaired and ready for new pairing.

ZOOM RANGE (7~60°)

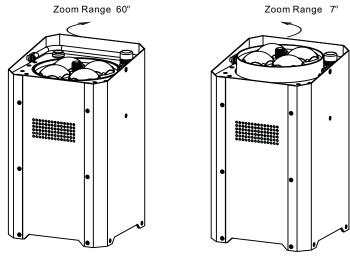


2.2 BATTERY CHARGING INPUT

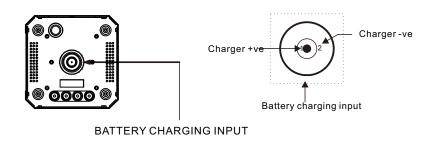

- Do not connect DMX
- Only for specified charger(in flight case or single charger)
- Do not connect any other data cables

2.3 GENERAL OPERATION

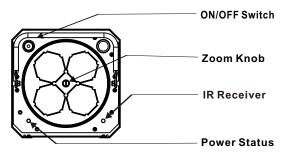

GREEN: >70% YELLOW: >20% RED: EMPTY


2.3.1 POWER STATUS

- During operation, the Power Statuas indicator will indicate the amount of battery power that is remaining.
 The battery should be recharged when RED is shown.
- During charging, the Power Statuas indicator will indicate the amount of battery power that has been charged to the battery. When the battery is fully charged the GREEN LED will immediately switch off.
- In the event that the battery storage switch is OFF, it is not possible to charge the battery. In this case, when the mains power is connected to the fixture, the Power Statuas indicator will show GREEN for 30 seconds and then fade out. This shows that electrical contact has been made between the lighting fixture and the battery charging system. The Battery Storage Swicth must be ON in order to charge the battery.
- In order to check the current status of the battery, the battery charging system should be turned OFF. The fixture can then be turned ON using the EVENT ON/OFF button and the **Power Statuas** can be checked.

2.3.2 ON/OFF SWITCH

- Press the SWITCH ON/OFF button for 3 seconds to turn on/off lighting fixture (when BATTERY SWITCH is ON)
- SWITCH ON/OFF button indicator LED when showing constant RED indicates lighting fixture is power ON (when slowly flashing indicates that DMX data is successfully received)

2.4 OTHER OPERATIONS

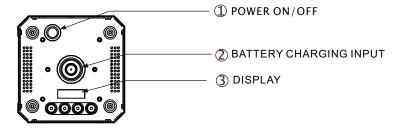

2.4.1 ANTENNA RELEASE

When releasing support antenna with hand

2.4.2 BATTERY SWITCH

- ON for operation/charging
- OFF for storage (>7 days)
- OFF for maintenance
- Always use the **Battery Switch** when storing for more than 7 days
- Battery Switch must be ON for operation and charging

ARC.1

CHANNEL	VALUE	FUNCTION
1	0⇔255	RED
2	0⇔255	GREEN
3	0<⇒≥255	BLUE

ARR.D

CHANNEL	VALUE	FUNCTION
1	0⇔255	MASTER DIMMER
2	0≪⇒255	RED
3	0⇔255	GREEN
4	0<⇒≥255	BLUE

ARC2

CHANNEL	VALUE	FUNCTION
1	0⇔ 255	RED
2	0⇔ 255	GREEN
3	0⇔ 255	BLUE
4	0⇔ 255	WHITE

AR2.D

CHANNEL	VALUE	FUNCTION
1	0⇔ 255	DIMMER
2	0⇔ 255	RED
3	0⇔ 255	GREEN
4	0⇔ 255	BLUE
5	0⇔ 255	WHITE
	1 2 3 4	2 0 ⇔ 255 3 0 ⇔ 255 4 0 ⇔ 255